 


Parts list for TC02-SC Short-Course - 2 (TC02-SC 配件包- 2)

T02026

 


Front bumper
(前防撞板)
1PCS




Motor guard
(馬達罩)
1PCS

T02027

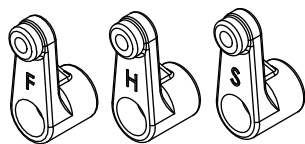

Steering servo horn-F
(轉向伺服臂F) 1PCS
Steering servo horn-H
(轉向伺服臂H) 1PCS
Steering servo horn-S
(轉向伺服臂S) 1PCS

 T02028




Servo plate
(伺服機座)
2PCS

T02029



4.8 Ball End - Long
(球頭座-長) 6PCS

 T02030

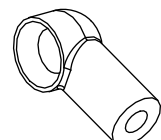

4.8 Ball End - Short
(球頭座-短)
2PCS



3x10 Screw
(螺絲)
1PCS

T02031



Upper cover nylon cap
(上蓋尼龍帽) 2PCS

 


Below Spring mount end
(下彈簧固定座) 2PCS



5.8 Ball End
(球頭座) 2PCS

T02034



Hexagonal
(六角座)
4PCS



2x9.8 Pin
(鋼針)
4PCS

T02035

 


1.0 Servo spacer
(伺服機座墊片)
2PCS



1.5 Servo spacer
(伺服機座墊片)
2PCS

T02036

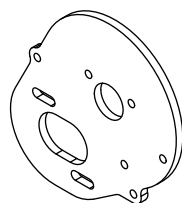

Motor plate
(馬達座)
1PCS

T02037



 
Front hinge pin barce
(前擺臂固定片)
1PCS

T02038




Slipper pad
(扭限摩擦片)
2PCS

T02039

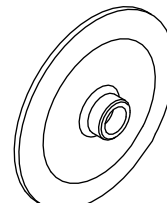


Slipper hub
(扭限座)
2PCS

 T02040

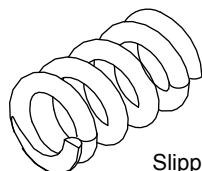

Slipper Spring
(扭限彈簧)
1PCS

 T02041

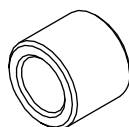

5x8x6.7 Top shaft spacer
(襯套)
1PCS

 
T02042



4.0 E-ring
(E扣) 2PCS



2x9.8 Pin
(鋼針) 2PCS



Front wheel axle
(前輪軸)
2PCS

T02043



Buffer column-A
(轉向緩沖器支柱A) 1PCS



Buffer Nut
(緩沖調整螺帽)
1PCS



4.0 E-ring
(E扣) 2PCS



Buffer Spring
(緩沖彈簧) 1PCS



Buffer column-B
(轉向緩沖器支柱B) 1PCS

T02044



3x10 Screw
(螺絲) 2PCS

 


Block Carrier
(緩沖鋼套)
2PCS



3x7x0.8 Washer
(墊片) 2PCS

T02091




3x54 Adjust Rod
(正反牙螺桿)
2PCS

T02046



 Differential connecting
hub - Short
(滾差接杯-短)
1PCS

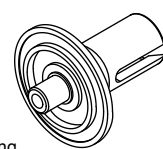


Differential connecting
hub - Long
(滾差接杯-長)
1PCS

T02047




Differential Spring
(滾差調整彈簧)
1PCS

 T02048

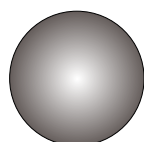


2.37mm Ball
(鋼珠)
12PCS

 T02049

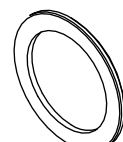


17x23x1 Washer
(墊片)
2PCS

 T02050

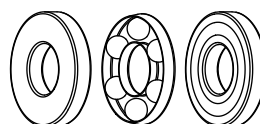

2.6x6x3 Stop push ball bearing
(止推軸承)
1PCS

 T02051

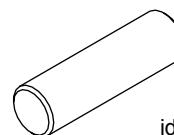

idler gear shaft
(減速齒輪軸)
1PCS